

HD3011
HD3012
HD3015
HD3016
HD3017
HD3018



EN User manual	VI Hướng dẫn sử dụng
ES-AR Manual del usuario	ZH-CN 用户手册
HI યુઝર ગેઝ્ટ્રુન મેસ્યુઅલ	AR دليل المستخدم
MS-MY Manual pengguna	FA راهنمایی پاسخ‌های مهندسی
TH คู่มือผู้ใช้	

PHILIPS



All registered and unregistered trademarks are property of their respective owners.
© 2012 Koninklijke Philips Electronics N.V.
All rights reserved.

HD3011_HD3012_HD3015_HD3016_HD3017_HD3018_UM_AS_V1.0

English

1 Your rice cooker

Congratulations on your purchase, and welcome to Philips!
To fully benefit from the support that Philips offers, register your product at www.Philips.com/welcome.

2 What's in the box

Rice cooker main unit	Steam basket
Rice scoop	Measuring cup
User manual	Safety leaflet
Warranty card	Power cord

Overview

① Inner pot	⑥ Lid release button
② Water level indications	⑦ Detachable steam vent cap
③ Scoop holder	⑧ Main body
④ Heating element	⑨ Power socket
⑤ Control Key	⑩ Keep warm indicator
⑥ Steam water storage	⑪ Cooking indicator
⑦ Outer lid	

3 Using the rice cooker

Before first use

- Take out all the accessories from the inner pot. Remove the packaging material of the inner pot.
- Clean the parts of the rice cooker thoroughly before using the rice cooker for the first time (see chapter "Cleaning").

Note

- Make sure all parts are completely dry before you start using the rice cooker.

Preparations before use


- Before using the rice cooker, you need to follow the preparation:
- Measure the rice using the measuring cup provided.
 - Wash the rice thoroughly.
 - Put the pre-washed rice in the inner pot.
 - Add water to the level indicated on the scale inside the inner pot that corresponds to the number of cups of rice used. Then smooth the rice surface.
 - Press the release lever to open the lid.
 - Put the inner pot in the rice cooker. Check if the inner pot is in proper contact with the heating element.
 - Close the lid of the rice cooker, put the plug in the power socket.

Note

- Each cup of uncooked rice normally gives 2 bowls of cooked rice. Do not exceed the quantities indicated on the inside of the inner pot.
- The level marked inside the inner pot is just an indication. You can always adjust the water level for different types of rice and your own preference. If the water is unstable at the area you live, it is possible that the rice cooker overflows.
- Besides following the water level indications, you can also add rice and water at 1:1.2 ratio for rice cooking. Do not exceed the quantities indicated on the inside of the inner pot.
- Make sure that the outside of the inner pot is dry and clean, and that there is no foreign residue on the heating element or the magnetic switch.

What's in the box
Contenido de la caja
ગાપીએલોમેર્ચેશ્વાં
Trong hòp có gì
محتويات الصندوق
محتويات از پایه

HD3011
HD3012
HD3015
HD3016
HD3017
HD3018

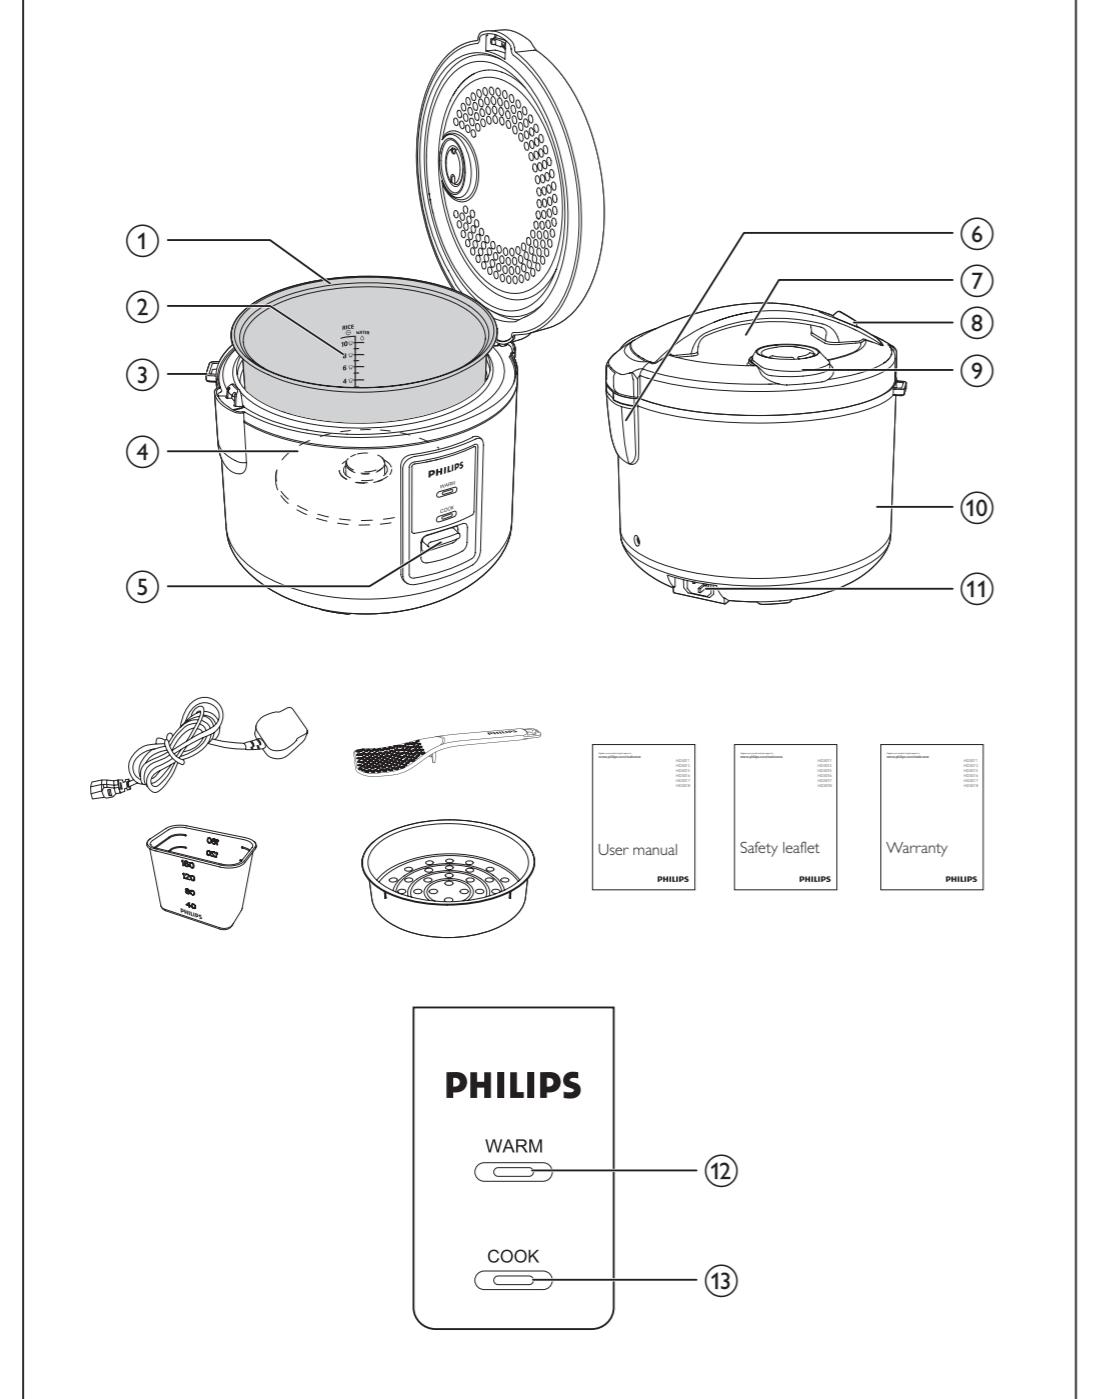

Cooking rice

- Follow the steps in "Preparations before use".
- Press down the control key, and the cooking (COOK) indicator lights up.
- When the cooking is finished, the cooking (COOK) indicator will be off.
- The rice cooker switches to keep warm mode automatically, and the keep warm (WARM) indicator lights up.

Note

- Do not exceed the volume indicated nor exceed the maximum water level indicated in the inner pot, as this may cause the rice cooker to overflow.

Exterior

Surface of the outer lid and outside of the main body:
• Wipe with a cloth damped with soap water.

• ONLY use soft and dry cloth to wipe the control panel.

• Make sure to remove all the food residues around the control buttons.

Accessories

Rice scoop, inner pot, steam basket, steam vent cap:

• Soak in hot water and clean with sponge.

5 Environment

Do not throw away the appliance with normal household waste at the end of its life, but hand it in at an official collection point for recycling. By doing this, you can help to preserve the environment.

6 Guarantee and service

If you need service or information, or if you have a problem, visit the Philips website at www.Philips.com or contact the Philips Customer Care Center in your country. You can find its phone number in the worldwide guarantee leaflet. If there is no Customer Care Center in your country, go to your local Philips dealer.

7 Troubleshooting

Problem	Solution
The lights on the buttons does not go on.	There is a connection problem. Check if the power cord is connected to the cooker properly and if the plug is inserted firmly into the power outlet.
The light is defective. Take the appliance to your Philips dealer or a service center authorized by Philips.	

3 Using the rice cooker

Before first use

- Take out all the accessories from the inner pot. Remove the packaging material of the inner pot.
- Clean the parts of the rice cooker thoroughly before using the rice cooker for the first time (see chapter "Cleaning").

Note

- Make sure all parts are completely dry before you start using the rice cooker.

Preparations before use

Before using the rice cooker, you need to follow the preparation:

- Measure the rice using the measuring cup provided.
- Wash the rice thoroughly.
- Put the pre-washed rice in the inner pot.

4 Add water to the level indicated on the scale inside the inner pot that corresponds to the number of cups of rice used. Then smooth the rice surface.

5 Press the release lever to open the lid.

6 Put the inner pot in the rice cooker. Check if the inner pot is in proper contact with the heating element.

7 Close the lid of the rice cooker, put the plug in the power socket.

Note

- Each cup of uncooked rice normally gives 2 bowls of cooked rice. Do not exceed the quantities indicated on the inside of the inner pot.

• The level marked inside the inner pot is just an indication. You can always adjust the water level for different types of rice and your own preference. If the water is unstable at the area you live, it is possible that the rice cooker overflows.

• Besides following the water level indications, you can also add rice and water at 1:1.2 ratio for rice cooking. Do not exceed the quantities indicated on the inside of the inner pot.

• Make sure that the outside of the inner pot is dry and clean, and that there is no foreign residue on the heating element or the magnetic switch.

• Each cup of uncooked rice normally gives 2 bowls of cooked rice. Do not exceed the quantities indicated on the inside of the inner pot.

• The level marked inside the inner pot is just an indication. You can always adjust the water level for different types of rice and your own preference. If the water is unstable at the area you live, it is possible that the rice cooker overflows.

• Besides following the water level indications, you can also add rice and water at 1:1.2 ratio for rice cooking. Do not exceed the quantities indicated on the inside of the inner pot.

• Make sure that the outside of the inner pot is dry and clean, and that there is no foreign residue on the heating element or the magnetic switch.

• Each cup of uncooked rice normally gives 2 bowls of cooked rice. Do not exceed the quantities indicated on the inside of the inner pot.

• The level marked inside the inner pot is just an indication. You can always adjust the water level for different types of rice and your own preference. If the water is unstable at the area you live, it is possible that the rice cooker overflows.

• Besides following the water level indications, you can also add rice and water at 1:1.2 ratio for rice cooking. Do not exceed the quantities indicated on the inside of the inner pot.

• Make sure that the outside of the inner pot is dry and clean, and that there is no foreign residue on the heating element or the magnetic switch.

• Each cup of uncooked rice normally gives 2 bowls of cooked rice. Do not exceed the quantities indicated on the inside of the inner pot.

• The level marked inside the inner pot is just an indication. You can always adjust the water level for different types of rice and your own preference. If the water is unstable at the area you live, it is possible that the rice cooker overflows.

• Besides following the water level indications, you can also add rice and water at 1:1.2 ratio for rice cooking. Do not exceed the quantities indicated on the inside of the inner pot.

• Make sure that the outside of the inner pot is dry and clean, and that there is no foreign residue on the heating element or the magnetic switch.

• Each cup of uncooked rice normally gives 2 bowls of cooked rice. Do not exceed the quantities indicated on the inside of the inner pot.

• The level marked inside the inner pot is just an indication. You can always adjust the water level for different types of rice and your own preference. If the water is unstable at the area you live, it is possible that the rice cooker overflows.

• Besides following the water level indications, you can also add rice and water at 1:1.2 ratio for rice cooking. Do not exceed the quantities indicated on the inside of the inner pot.

• Make sure that the outside of the inner pot is dry and clean, and that there is no foreign residue on the heating element or the magnetic switch.

• Each cup of uncooked rice normally gives 2 bowls of cooked rice. Do not exceed the quantities indicated on the inside of the inner pot.

• The level marked inside the inner pot is just an indication. You can always adjust the water level for different types of rice and your own preference. If the water is unstable at the area you live, it is possible that the rice cooker overflows.

• Besides following the water level indications, you can also add rice and water at 1:1.2 ratio for rice cooking. Do not exceed the quantities indicated on the inside of the inner pot.

• Make sure that the outside of the inner pot is dry and clean, and that there is no foreign residue on the heating element or the magnetic switch.

• Each cup of uncooked rice normally gives 2 bowls of cooked rice. Do not exceed the quantities indicated on the inside of the inner pot.

• The level marked inside the inner pot is just an indication. You can always adjust the water level for different types of rice and your own preference. If the water is unstable at the area you live, it is possible that the rice cooker overflows.

• Besides following the water level indications, you can also add rice and water at 1:1.2 ratio for rice cooking. Do not exceed the quantities indicated on the inside of the inner pot.

• Make sure that the outside of the inner pot is dry and clean, and that there is no foreign residue on the heating element or the magnetic switch.

• Each cup of uncooked rice normally gives 2 bowls of cooked rice. Do not exceed the quantities indicated on the inside of the inner pot.

• The level marked inside the inner pot is just an indication. You can always adjust the water level for different types of rice and your own preference. If the water is unstable at the area you live, it is possible that the rice cooker overflows.

• Besides following the water level indications, you can also add rice and water at 1:1.2 ratio for rice cooking. Do not exceed the quantities indicated on the inside of the inner pot.

• Make sure that the outside of the inner pot is dry and clean, and that there is no foreign residue on the heating element or the magnetic switch.

• Each cup of uncooked rice normally gives 2 bowls of cooked rice. Do not exceed the quantities indicated on the inside of the inner pot.

• The level marked inside the inner pot is just an indication. You can always adjust the water level for different types of rice and your own preference. If the water is unstable at the area you live, it is possible that the rice cooker overflows.

• Besides following the water level indications, you can also add rice and water at 1:1.2 ratio for rice cooking. Do not exceed the quantities indicated on the inside of the inner pot.

• Make sure that the outside of the inner pot is dry and clean, and that there is no foreign residue on the heating element or the magnetic switch.

• Each cup of uncooked rice normally gives 2 bowls of cooked rice. Do not exceed the quantities indicated on the inside of the inner pot.

• The level marked inside the inner pot is just an indication. You can always adjust the water level for different types of rice and your own preference. If the water is unstable at the area you live, it is possible that the rice cooker overflows.

• Besides following the water level indications, you can also add rice and water at 1:1.2 ratio for rice cooking. Do not exceed the quantities indicated on the inside of the inner pot.

• Make sure that the outside of the inner pot is dry and clean, and that there is no foreign residue on the heating element or the magnetic switch.

• Each cup of uncooked rice normally gives 2 bowls of cooked rice. Do not exceed the quantities indicated on the inside of the inner pot.

• The level marked inside the inner pot is just an indication. You can always adjust the water level for different types of rice and your own preference. If the water is unstable at the area you live, it is possible that the rice cooker overflows.

• Besides following the water level indications, you can also add rice and water at 1:1.2 ratio for rice cooking. Do not exceed the quantities indicated on the inside of the inner pot.

• Make sure that the outside of the inner pot is dry and clean, and that there is no foreign residue on the heating element or the magnetic switch.

5 Alam sekitar

Jangan buang perkakas ini dengan sampah rumah biasa di akhir hayatnya, sebaliknya bawa ke pusat pungutan ratus untuk dikitar semula. Demikian dalam ini, anda membantu memelihara alam sekitar.

6 Jaminan dan perkhidmatan

Jika anda memerlukan servis atau maklumat, atau jika anda mengalami masalah, lawati laman web Philips di www.philips.com atau hubung Pusat Layanan Pelanggan Philips di negara anda. Anda boleh mendapatkan nombor telefonnya dalam risalah jaminan seluruh dunia. Jika tidak Pusat Layanan Pelanggan di negara anda, pergi ke penjuru Philips tempatan anda.

7 Menyelesaikan masalah

Masalah	Penyelesaian
Lampu pada butang tidak menyala.	Terdapat masalah sambungan. Periksa sama ada kord kuasa telah disambung kepada pemasakan dengan betul dan sama ada plug telah dimasukkan dengan kukuh ke dalam saluran keluar kuasa.
Nasi masih mentah.	Air tidak mencukupi. Tambah air mengikut skala pada bahagian dalam perut dalam.
Nasi belum cukup masak.	Anda tidak menekan kekunci kawalan di bawah. Pastikan tidak terdapat sisa asing pada elemen pemasan dan bahagian luar perut dalam sebelum menghidupkan pemasak nasi.

Pemasak tidak bertukar kepada mod simpan panas secara automatik ketika dalam mod "Memasak Nasi". Nasinya hangus.

Air melimpah keluar daripada pemasak nasi semasa memasak.

Bau nasi kurang menyenangkan selepas dimasak.

Perut tidak bertukar kepada mod simpan panas secara automatik ketika dalam mod "Memasak Nasi".

Perut tidak bertukar kepada mod simpan panas secara automatik ketika dalam mod "Memasak Nasi".

Nasi yang dibuat bersifat basah.

Perut tidak bertukar kepada mod simpan panas secara automatik ketika dalam mod "Memasak Nasi".

Nasi yang dibuat bersifat basah.

Nasi yang dibuat bersifat basah.