



**Electrolux**



[electrolux.com/register](http://electrolux.com/register)



**EKK925A0OX**

**EN** User Manual | **Cooker**



# Welcome to Electrolux! Thank you for choosing our appliance.



Get usage advice, brochures, troubleshooting, service and repair information:  
[www.electrolux.com/support](http://www.electrolux.com/support)

Subject to change without notice.

## CONTENTS

1. SAFETY INFORMATION.....	2
2. SAFETY INSTRUCTIONS.....	5
3. PRODUCT DESCRIPTION.....	8
4. BEFORE FIRST USE.....	9
5. HOB - DAILY USE.....	9
6. HOB - HINTS AND TIPS.....	11
7. HOB - CARE AND CLEANING.....	11
8. OVEN - DAILY USE.....	12
9. OVEN - CLOCK FUNCTIONS.....	13
10. OVEN - USING THE ACCESSORIES.....	14
11. OVEN - HINTS AND TIPS.....	16
12. OVEN - CARE AND CLEANING.....	19
13. TROUBLESHOOTING.....	22
14. INSTALLATION.....	24
15. ENVIRONMENTAL CONCERNS.....	30

## 1. ⚠ SAFETY INFORMATION

Before the installation and use of the appliance, carefully read the supplied instructions. The manufacturer is not responsible for any injuries or damage that are the result of incorrect installation or usage. Always keep the instructions in a safe and accessible location for future reference.

### 1.1 Children and vulnerable people safety

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning the use of the appliance in a safe way and understand the hazards involved. Children of less than 8 years of age and persons with very extensive and complex disabilities shall

be kept away from the appliance unless continuously supervised.

- Children should be supervised to ensure that they do not play with the appliance.
- Keep all packaging away from children and dispose of it appropriately.
- **WARNING:** The appliance and its accessible parts become hot during use. Keep children and pets away from the appliance when in use and when cooling down.
- Children shall not carry out cleaning and user maintenance of the appliance without supervision.

## **1.2 General Safety**

- This appliance is for cooking purposes only.
- This appliance is designed for single household domestic use in an indoor environment.
- This appliance may be used in offices, hotel guest rooms, bed & breakfast guest rooms, farm guest houses and other similar accommodation where such use does not exceed (average) domestic usage levels.
- Only a qualified person must install this appliance and replace the cable.
- This appliance is intended for use up to an altitude of 2000 m above sea level.
- This appliance is not intended to be used on ships, boats or vessels.
- Do not install the appliance behind a decorative door in order to avoid overheating.
- Do not install the appliance on a platform.
- Do not operate the appliance by means of an external timer or separate remote-control system.
- **WARNING:** Unattended cooking on a hob with fat or oil can be dangerous and may result in fire.
- Never use water to extinguish the cooking fire. Switch off the appliance and cover flames with e.g. a fire blanket or lid.

- **CAUTION:** The cooking process has to be supervised. A short term cooking process has to be supervised continuously.
- **WARNING:** Danger of fire: Do not store items on the cooking surfaces.
- Do not use a steam cleaner to clean the appliance.
- Do not use harsh abrasive cleaners or sharp metal scrapers to clean the glass door or the glass of hinged lids of the hob since they can scratch the surface, which may result in shattering of the glass.
- Metallic objects such as knives, forks, spoons and lids should not be placed on the hob surface since they can get hot.
- Remove any spillage from the lid before opening. Let the hob surface cool down before closing the lid.
- **WARNING:** The appliance and its accessible parts become hot during use. Care should be taken to avoid touching heating elements.
- Always use oven gloves to remove or insert accessories or ovenware.
- Before maintenance, cut the power supply.
- **WARNING:** Ensure that the appliance is switched off before replacing the lamp to avoid the possibility of electric shock.
- If the mains power supply cable is damaged, it must be replaced by the manufacturer, its Authorised Service Centre or similarly qualified persons to avoid an electrical hazard.
- To remove the shelf supports first pull the front of the shelf support and then the rear end away from the side walls. Install the shelf supports in the opposite sequence.
- **WARNING:** Use only hob guards designed by the manufacturer of the cooking appliance or indicated by the manufacturer of the appliance in the instructions for use as suitable or hob guards incorporated in the appliance. The use of inappropriate guards can cause accidents.

## 2. SAFETY INSTRUCTIONS

This appliance is suitable for the following

markets: **BH** **IQ** **KW** **LB** **OM** **QA** **SC** **MU**

**KE** **AE** **TZ** **UG**

### 2.1 Installation

#### **WARNING!**

Only a qualified person must install this appliance.

- Remove all the packaging.
- Do not install or use a damaged appliance.
- Follow the installation instructions supplied with the appliance.
- Always take care when moving the appliance as it is heavy. Always use safety gloves and enclosed footwear.
- Do not pull the appliance by the handle.
- The kitchen cabinet and the recess must have suitable dimensions.
- Keep the minimum distance from other appliances and units.
- Install the appliance in a safe and suitable place that meets installation requirements.
- Parts of the appliance carry current. Close the appliance with furniture to prevent touching the dangerous parts.
- The sides of the appliance must stay next to appliances or units with the same height.
- Do not install the appliance adjacent to a door or under a window. This prevents hot cookware to fall from the appliance when the door or the window is opened.
- Make sure to install a stabilizing means in order to prevent tipping of the appliance. Refer to Installation chapter.

### 2.2 Electrical Connection

#### **WARNING!**

Risk of fire and electric shock.

- All electrical connections should be made by a qualified electrician.
- The appliance must be earthed.

- Make sure that the parameters on the rating plate are compatible with the electrical ratings of the mains power supply.
- Always use a correctly installed shockproof socket.
- Do not use multi-plug adapters and extension cables.
- Do not let mains cables touch or come near the appliance door or the niche below the appliance, especially when it operates or the door is hot.
- The shock protection of live and insulated parts must be fastened in such a way that it cannot be removed without tools.
- Connect the mains plug to the mains socket only at the end of the installation. Make sure that there is access to the mains plug after the installation.
- If the mains socket is loose, do not connect the mains plug.
- Do not pull the mains cable to disconnect the appliance. Always pull the mains plug.
- Use only correct isolation devices: line protecting cut-outs, fuses (screw type fuses removed from the holder), earth leakage trips and contactors.
- The electrical installation must have an isolation device which lets you disconnect the appliance from the mains at all poles. The isolation device must have a contact opening width of minimum 3 mm.
- Fully close the appliance door before you connect the mains plug to the mains socket.

### 2.3 Gas connection

- All gas connections must be made by a qualified person.
- Before installation, make sure that the local distribution conditions (nature of the gas and gas pressure) and the adjustment of the appliance are compatible.
- Make sure that there is air circulation around the appliance.
- The information about the gas supply is on the rating plate.
- This appliance is not connected to a device which evacuates the products of combustion. Make sure to connect the

appliance in accordance with current installation regulations. Follow the requirements for adequate ventilation.

## 2.4 Use

### **WARNING!**

Risk of injury and burns.  
Risk of electrical shock.

### **CAUTION!**

The use of a gas cooking appliance results in the production of heat, moisture and products of combustion in the room in which it is installed. Ensure that the kitchen is well ventilated especially when the appliance is in use.

Prolonged intensive use of the appliance may require additional ventilation, for example the increasing of mechanical ventilation where present, additional ventilation to safely remove the products of combustion to outside (external) air whilst also providing room air changes with additional ventilation. Consult a qualified person before installation of the additional ventilation.

- Do not change the specification of this appliance.
- Make sure that the ventilation openings are not blocked.
- Do not let the appliance stay unattended during operation.
- Deactivate the appliance after each use.
- Be careful when you open the appliance door while the appliance is in operation. Hot air can release.
- Do not operate the appliance with wet hands or when it has contact with water.
- Do not use the appliance as a work surface or as a storage surface.
- Do not use aluminium foil or other materials between the cooking surface and the cookware, unless otherwise specified by the manufacturer of this appliance.
- Use only accessories recommended for this appliance by the manufacturer.
- Always use glass and jars approved for preserving purposes.

### **WARNING!**

Risk of fire and explosion.

- Fats and oil when heated can release flammable vapours. Keep flames or heated objects away from fats and oils when you cook with them.
- The vapours that very hot oil releases can cause spontaneous combustion.
- Used oil, that can contain food remnants, can cause fire at a lower temperature than oil used for the first time.
- Do not put flammable products or items that are wet with flammable products in, near or on the appliance.
- Do not let sparks or open flames to come in contact with the appliance when you open the door.
- Open the appliance door carefully. The use of ingredients with alcohol can cause a mixture of alcohol and air.

### **WARNING!**

Risk of damage to the appliance.

- To prevent damage or discoloration to the enamel:
  - do not put ovenware or other objects in the appliance directly on the bottom.
  - do not put aluminium foil directly on the bottom of cavity.
  - do not put water directly into the hot appliance.
  - do not keep moist dishes and food in the appliance after you finish the cooking.
  - be careful when you remove or install the accessories.
- Discoloration of the enamel or stainless steel has no effect on the performance of the appliance.
- Use a deep pan for moist cakes. Fruit juices cause stains that can be permanent.
- Do not keep hot cookware on the control panel.
- Do not let cookware boil dry.
- Be careful not to let objects or cookware fall on the appliance. The surface can be damaged.
- Never leave a burner on with empty cookware or without cookware.

- Cookware made of cast iron, aluminium or with a damaged bottom can cause scratches. Always lift these objects up when you have to move them on the cooking surface.
- Provide good ventilation in the room where the appliance is installed.
- Use only stable cookware with the correct shape and diameter larger than the dimensions of the burners.
- Make sure the flame does not go out when you quickly turn the knob from the maximum to the minimum position.
- Do not install a flame diffuser on the burner.

## 2.5 Care and Cleaning

### **WARNING!**

Risk of injury, fire, or damage to the appliance.

- Before maintenance, deactivate the appliance. Disconnect the mains plug from the mains socket.
- Make sure the appliance is cold. There is the risk that the glass panels can break.
- Replace immediately the door glass panels when they are damaged. Contact the Authorised Service Centre.
- Be careful when you remove the door from the appliance. The door is heavy!
- Fat and food remaining in the appliance can cause fire.
- Clean regularly the appliance to prevent the deterioration of the surface material.
- Clean the appliance with a moist soft cloth. Use only neutral detergents. Do not use abrasive products, abrasive cleaning pads, solvents or metal objects.
- If you use an oven spray, follow the safety instructions on the packaging.
- Do not clean the catalytic enamel (if applicable) with any kind of detergent.
- Do not clean the burners in the dishwasher.

## 2.6 Lid

- Do not change the specification of the lid.
- Clean the lid regularly.
- Do not open the lid, when there are spills on the surface.

- Before you close the lid turn all burners off.
- Do not close the lid until the hob and oven are completely cold.
- Glass lid can shatter, when heated (if applicable).



- Keep the lid glass open, while the oven is in operation (if applicable).

## 2.7 Internal lighting

### **WARNING!**

Risk of electric shock.

- Concerning the lamp(s) inside this product and spare part lamps sold separately: These lamps are intended to withstand extreme physical conditions in household appliances, such as temperature, vibration, humidity, or are intended to signal information about the operational status of the appliance. They are not intended to be used in other applications and are not suitable for household room illumination.
- This product contains a light source of energy efficiency class G.
- Use only lamps with the same specifications.

## 2.8 Service

- To repair the appliance contact the Authorised Service Centre.
- Use original spare parts only.

## 2.9 Disposal

### **WARNING!**

Risk of injury or suffocation.


- Contact your municipal authority for information on how to dispose of the appliance.
- Disconnect the appliance from the mains supply.

- Cut off the mains electrical cable close to the appliance and dispose of it.

- Flat the external gas pipes.


## 3. PRODUCT DESCRIPTION

### 3.1 General overview

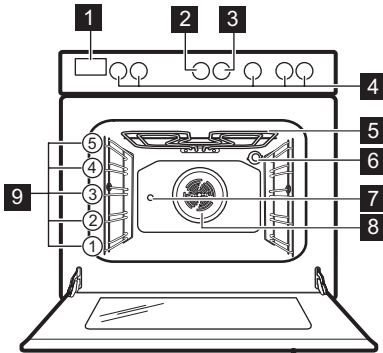

- 1** Electronic programmer
- 2** Knob for the temperature
- 3** Knob for the oven functions
- 4** Knobs for the hob
- 5** Heating element
- 6** Lamp
- 7** Turnspit hole
- 8** Fan
- 9** Shelf positions

### 3.2 Cooking surface layout

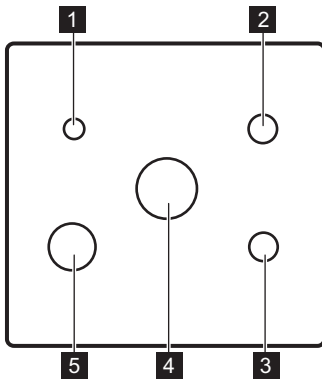

- 1** Auxiliary burner
- 2** Semi-rapid burner
- 3** Semi-rapid burner
- 4** Triple Crown burner
- 5** Rapid burner

### 3.3 Accessories

- **Wire shelf**  
For cookware, cake tins, roasts.
- **Baking tray**  
For cakes and biscuits.
- **Turnspit**  
For roasting larger joints of meat and poultry.
- **Storage compartment**  
The storage compartment is below the oven cavity. To use the compartment, lift the lower front door then pull it down.

#### **⚠ WARNING!**

The storage compartment can become hot when the appliance operates.

- **Coffee pot (if applicable)**  
For coffee makers and small pans.

## 4. BEFORE FIRST USE

### **WARNING!**

Refer to Safety chapters.



To set the Time of day refer to "Clock functions" chapter.

### 4.1 Initial Cleaning

Remove all accessories and removable shelf supports from the appliance.




Refer to "Care and cleaning" chapter.


 
Clean the appliance and the accessories before first use.

Put the accessories and the removable shelf supports back to their initial position.

### 4.2 Setting the time


You must set the time before you operate the oven.


The  flashes when you connect the appliance to the electrical supply, when there was a power cut or when the timer is not set.

Press the  or  to set the correct time. After approximately five seconds, the flashing stops and the display shows the time of day you set.

### 4.3 Changing the time






You cannot change the time of day if the Duration  function operates.

Press  again and again until the indicator for the Time of Day function flashes. To set a new time, refer to "Setting the time".

### 4.4 Preheating

Preheat the empty appliance to burn off the remaining grease.

1. Set the function  and the maximum temperature.
2. Let the appliance operate for 1 hour.
3. Set the function  and set the maximum temperature.
4. Let the appliance operate for 15 minutes.
5. Set the function  and set the maximum temperature.
6. Let the appliance operate for 15 minutes. Accessories can become hotter than usual. The appliance can emit an odour and smoke. This is normal. Make sure that the airflow in the room is sufficient.

## 5. HOB - DAILY USE

### **WARNING!**

Refer to Safety chapters.

### 5.1 Ignition of the hob burner



Always light the burner before you put on the cookware.

### **WARNING!**

Be very careful when you use open fire in the kitchen environment. The manufacturer declines any responsibility in case of the flame misuse.





The spark generator can start automatically when you switch on the mains, after installation or a power cut. It is normal.



In the absence of electricity you can ignite the burner manually.

### Ignition of a hob burner with the thermocouple

- For manual ignition put the flame near the burner. Push the knob for the hob down and turn it counterclockwise to the maximum gas flow position .
- For integrated ignition on knob push the knob for the hob down and turn it counterclockwise to the maximum gas flow position .

Keep the knob for the hob pushed for equal or less than 10 seconds to let the thermocouple warm up. If not, the gas supply is interrupted.

Adjust the flame after it is regular.

### WARNING!

Do not keep the knob pushed for more than 15 seconds. If the burner does not light after 15 seconds, release the knob, turn it into the off position and try to light the burner again after minimum 1 minute.





If after some tries the burner does not light, check if the crown and its cap are in the correct position.




If the burner accidentally goes out, turn the knob to the off position and try to light the burner again after minimum 1 minute.

## 5.2 Burner overview

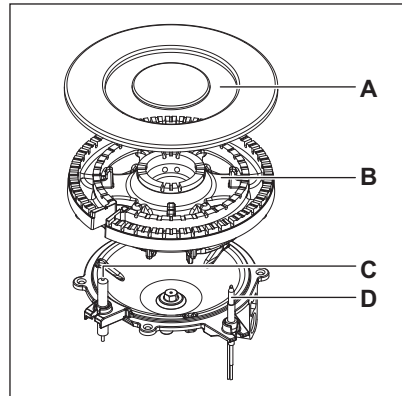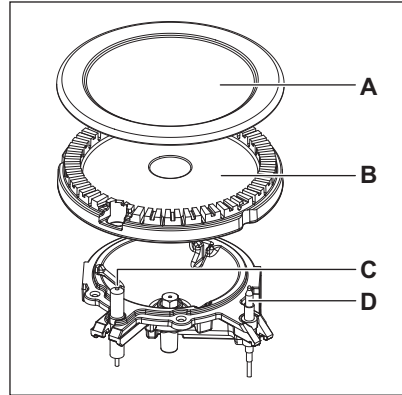

- A. Burner cap
- B. Burner crown
- C. Ignition candle
- D. Thermocouple (if applicable)

## 5.3 Turning the burner off

To put the flame out, turn the knob to the off position .

### WARNING!

Always turn the flame down or switch it off before you remove the pans from the burner.

## 6. HOB - HINTS AND TIPS

### WARNING!

Refer to Safety chapters.

### 6.1 Cookware

#### WARNING!

Do not put the same pan on two burners.

#### WARNING!

Do not put unstable or damaged pots on the burner to prevent from spill and injury.

#### CAUTION!

Make sure that pot handles are not above the front edge of the cooktop.

#### CAUTION!

Make sure that the pots are placed centrally on the burner in order to get maximum stability and to get lower gas consumption.

### 6.2 Diameters of cookware

#### WARNING!

Use cookware with diameters applicable to the size of burners.

Burner	Diameter of cookware (mm)
Triple Crown	160 - 260
Rapid	160 - 240
Semi-rapid	140 - 240
Auxiliary	120 - 180

### 6.3 Energy saving

- If it is possible, always put the lids on the cookware.
- When the liquid starts to boil, turn down the flame to barely simmer the liquid.

## 7. HOB - CARE AND CLEANING

### WARNING!

Refer to Safety chapters.

### 7.1 General information

- Clean the hob after each use.
- Always use cookware with clean bottom.
- Scratches or dark stains on the surface have no effect on how the hob operates.
- Use a special cleaner applicable for the surface of the hob.
- Wash stainless steel parts with water, and then dry them with a soft cloth.

### 7.2 Cleaning the hob

- **Remove immediately:** melted plastic, plastic foil, sugar and food with sugar. If not, the dirt can cause damage to the hob. Take care to avoid burns.

- **Remove when the hob is sufficiently cool:** limescale rings, water rings, fat stains, shiny metallic discoloration. Clean the hob with a moist cloth and non-abrasive detergent. After cleaning, wipe the hob dry with a soft cloth.
- To clean the enamelled parts, cap and crown, wash them with warm soapy water and dry them carefully before you put them back on.

### 7.3 Cleaning the spark plug

This feature is obtained through a ceramic ignition candle with a metal electrode. Keep these components well clean to prevent difficult lighting and check that the burner crown holes are not obstructed.

## 7.4 Pan supports



The pan supports are not resistant to washing in a dishwasher. They must be washed by hand.

1. Remove the pan supports to easily clean the hob.



Be very careful when you replace the pan supports to prevent the hob top from damage.

2. After you clean the pan supports, make sure that they are in correct positions.
3. For the burner to operate correctly, make sure that the arms of the pan supports are aligned with the centre of the burner.

## 7.5 Periodic maintenance

Speak to your local Authorised Service Centre periodically to check the conditions of the gas supply pipe and the pressure adjuster, if fitted.

## 8. OVEN - DAILY USE



### WARNING!

Refer to Safety chapters.

### 8.1 Activating and deactivating the appliance



**It depends on the model if your appliance has lamps, knob symbols or indicators:**

- The lamp comes on when the appliance operates.
- The symbol shows whether the knob controls one of the cooking zones, the oven functions or the temperature.
- The indicator comes on when the oven heats up.

1. Turn the knob for the oven functions to select an oven function.

### 8.4 Oven functions

2. Turn the knob for the temperature to select a temperature.
3. To deactivate the appliance turn the knobs for the oven functions and temperature to the off position.

### 8.2 Safety thermostat






Incorrect operation of the appliance or defective components can cause dangerous overheating. To prevent this, the oven has a safety thermostat which interrupts the power supply. The oven activates again automatically when the temperature drops.

### 8.3 Cooling fan

When the appliance operates, the cooling fan activates automatically to keep the surfaces of the appliance cool.

Symbol	Oven function	Application
0	Off position	The appliance is off.
	Conventional Cooking	To bake and roast food on 1 shelf position.




Symbol	Oven function	Application
	Bottom Heat	To bake cakes with crispy bottom and to preserve food.
	Top Heat	To brown bread, cakes and pastries. To finish cooked dishes.
	Grilling with Turnspit	To grill meat, including kebabs and smaller pieces of meat.
	True Fan Cooking	Set the temperature 20 - 40 °C lower than for Conventional Cooking.
	Defrost	To defrost frozen food.

## 9. OVEN - CLOCK FUNCTIONS


### 9.1 Electronic programmer

Display

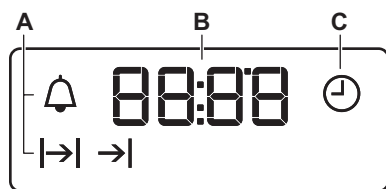
 



- A. Function indicators
- B. Time display
- C. Function indicator


 


Buttons


Button	Function	Description
—	MINUS	To set the time.
	CLOCK	To set a clock function.
+	PLUS	To set the time.


## Clock functions table

  Clock function		Application
	TIME OF DAY	To set, change or check the time of day.
	DURATION	To set how long the oven operates.
	MINUTE MINDER	To set countdown time. This function has no effect on the operation of the oven. You can set the MINUTE MINDER at any time, also when the oven is off.



### Setting the DURATION


 
1. Set an oven function and temperature.
2. Press  again and again until  starts to flash.
3. Press  or  to set the DURATION time.

The display shows .



4. When the time ends,  flashes and an acoustic signal sounds. The appliance deactivates automatically.
5. Press any button to stop the acoustic signal.
6. Turn the knob for the oven functions and the knob for the temperature to the off position.

### Setting the MINUTE MINDER

1. Press  again and again until  starts to flash.

2. Press  or  to set the necessary time. The Minute Minder starts automatically after 5 seconds.
3. When the set time ends, an acoustic signal sounds. Press any button to stop the acoustic signal.
4. Turn the knob for the oven functions to the off position.

### Cancelling the clock functions

1. Press the  again and again until the necessary function indicator starts to flash.
2. Press and hold .  
The clock function goes out after some seconds.


## 10. OVEN - USING THE ACCESSORIES

### WARNING!

Refer to Safety chapters.

### 10.1 Inserting the accessories

Wire shelf:

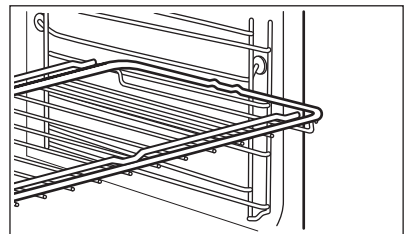

Put the shelf between the guide bars of the shelf support. The front and back bars should be placed upwards.


**⚠ WARNING!**

The maximum weight permitted on the oven shelf is 24 kg. Avoid putting heavier food on the shelf.

Tray:



Do not push the baking tray all the way to the back wall of the cavity. This prevents the heat from circulating around the tray. The food may be burnt, especially in the rear part of the tray.

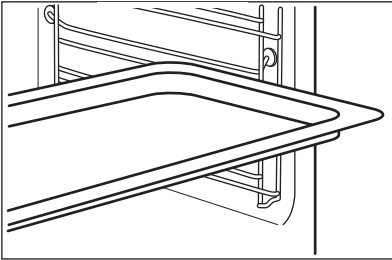

Push the tray or deep pan between the guide bars of the shelf support. Make sure it does not touch the back wall of the oven.

## 10.2 Using the turnspit

**⚠ WARNING!**


Be careful when you use the turnspit. The forks and the spit are sharp. There is a risk of injury.

**⚠ WARNING!**

Use oven gloves when you remove the turnspit. The turnspit and the grill are hot. There is a risk of burns.

**⚠ CAUTION!**

The maximum weight permitted on the turnspit is 4.5 kg.

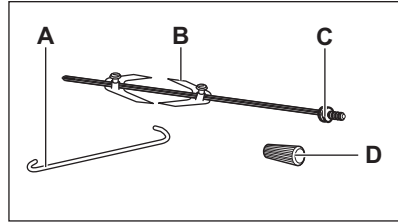


- A. Support hook
- B. Forks
- C. Spit
- D. Handle




The support hook is installed in the top of the oven cavity. You can leave the support hook in the oven, when the turnspit is not active.


1. Open the oven door.
2. Put the turnspit handle into the spit.
3. Put the baking tray on the lowest shelf level.
4. Snap out one end of the support hook from the oven ceiling A and let it hang on the other end.

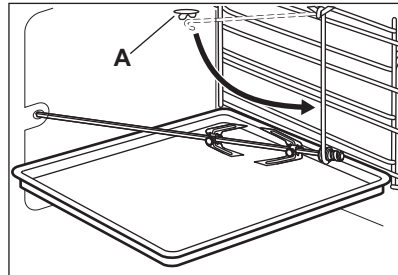

5. Install the first fork on the spit, then put the meat on the turnspit and install the second fork. Make sure that the meat is in the middle of the spit.

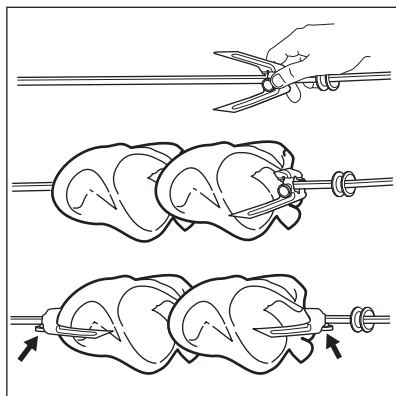

6. Use the screws to tighten the forks.
7. Put the tip of the spit into the turnspit hole.

8. Refer to "Product description" chapter.
  8. Put the front part of the spit on the support hook.
  9. Remove the turnspit handle.
  10. Turn the knob for the oven functions to the turnspit position .
  11. Set the necessary temperature.
  12. Make sure that turnspit rotates.
  13. Close the oven door.  
The turnspit does not stop if you open the oven door.
- Turn off the grill. Install the turnspit handle. Carefully remove the turnspit and the roasting pan from the oven.

## 11. OVEN - HINTS AND TIPS

### **WARNING!**

Refer to Safety chapters.

### **i**

The temperature and baking times in the tables are guidelines only. They depend on the recipes and the quality and quantity of the ingredients used.

### 11.1 General information

- The appliance has five shelf positions. Count the shelf positions from the bottom of the appliance floor.
- The appliance has a special system which circulates the air and constantly recycles the steam. With this system you can cook in a steamy environment and keep the food soft inside and crusty outside. It decreases the cooking time and energy consumption to a minimum.
- Moisture can condense in the appliance or on the door glass panels. This is normal. Always stand back from the appliance when you open the appliance door while cooking. To decrease the condensation, operate the appliance for 10 minutes before cooking.

- Clean the moisture after each use of the appliance.
- Do not put the objects directly on the appliance floor and do not put aluminium foil on the components when you cook. This can change the baking results and cause damage to the enamel.

### 11.2 Baking

- Your oven may bake or roast differently to the appliance you had before. Adapt your usual settings (temperature, cooking times) and shelf positions to the values in the tables.
- The manufacturer recommends that you use the lower temperature the first time.
- If you cannot find the settings for a special recipe, look for the one that is almost the same.
- You can extend baking times by 10 – 15 minutes if you bake cakes on more than one shelf position.
- Cakes and pastries at different heights do not always brown equally at first. If this occurs, do not change the temperature setting. The differences equalize during the baking procedure.
- With longer baking times, you can deactivate the oven approximately 10

minutes before the end of the baking time and then use the residual heat.  
When you cook frozen food, the trays in the oven can twist during baking. When the trays become cold again, the distortions are gone.

### 11.3 Baking cakes

- Do not open the oven door before 3/4 of the set cooking time is up.

### 11.4 Cooking meat and fish

- Use a deep pan for very fatty food to prevent the oven from stains that can be permanent.
- Leave the meat for approximately 15 minutes before carving so that the juice does not seep out.
- To prevent too much smoke in the oven during roasting, add some water into the

deep pan. To prevent the smoke condensation, add water each time after it dries up.

### 11.5 Cooking times

Cooking times depend on the type of food, its consistency, and volume.

Initially, monitor the performance when you cook. Find the best settings (heat setting, cooking time, etc.) for your cookware, recipes and quantities when you use this appliance.

### 11.6 Cooking tables



The time does not include preheating.

### Casseroles

Food	Quantity (kg)	Oven function	Temperature (°C)	Time (min)	Shelf position
Lasagna <sup>1)</sup>	2.5 - 4.0	True Fan Cooking	190	50 - 55	2
Cannelloni <sup>1)</sup>	2.5 - 4.0	True Fan Cooking	190	50 - 55	2
Potato gratin <sup>1)</sup>	2.5 - 3.0	True Fan Cooking	180	60 - 65	2
Macaroni oven <sup>1)</sup>	4.0 - 4.5	True Fan Cooking	180	50 - 55	2
Kebab Hala	3.5 - 4.0	True Fan Cooking	180	45 - 50	2

<sup>1)</sup> Preheat the oven for 15 minutes.

### Meat & Poultry

Food	Quantity (kg)	Oven function	Temperature (°C)	Time (min)	Shelf position
Sheep	3.0 - 4.0	True Fan Cooking	200	90 - 120	2
Chicken	2.0 - 3.5	Conventional cooking	230	70 - 90 <sup>1)</sup>	2
Duck	2.4 - 3.6	True Fan Cooking	220	90 - 120	2
Goose	5.0 - 6.0	True Fan Cooking	220	100 - 160	2
Rabbit	2.0 - 3.0	True Fan Cooking	180	90 - 120	2

Food	Quantity (kg)	Oven function	Temperature (°C)	Time (min)	Shelf position
Beef	2.4 - 3.0	True Fan Cooking	250	90 - 120	2

1) Turn over after 45 min.

### Fish

Food	Quantity (kg)	Oven function	Temperature (°C)	Time (min)	Shelf position
Pike	1.6 - 3.0	True Fan Cooking	190	50 - 60	2
Dorade	0.8 - 1.4	True Fan Cooking	180	30 - 40	2
Trout	1.0 - 2.0	True Fan Cooking	200	25 - 30	2

### Pizza

Food	Quantity (kg)	Oven function	Temperature (°C)	Time (min)	Shelf position
Thin 1)	1.5 - 2.5	True Fan Cooking	240	20 - 25	1
Thick 1)	1.5 - 2.0	True Fan Cooking	230	20 - 25	1
Calzone 1)	1.5 - 2.5	True Fan Cooking	180	30 - 35	1

1) Preheat the oven for 15 minutes.

### Cakes

Food	Quantity (kg)	Oven function	Temperature (°C)	Time (min)	Shelf position
Flat cake 1)	1.2 - 1.5	True Fan Cooking	180	15 - 20	2
Flat cake 1)	2.4 - 3.0	True Fan Cooking	160	20 - 25	2 and 4
Sponge cake	3.0 - 3.5	True Fan Cooking	140	80 - 90	2
Feter Mshalted 1)	2.5 - 3.0	True Fan Cooking	200	35 - 40	2
Salty cake 1)	3.0 - 3.5	True Fan Cooking	180	50 - 60	2
Yeast cake 1)	2.5 - 3.0	True Fan Cooking	180	45 - 50	2

1) Preheat the oven for 15 minutes.

## Grilling

Food	Quantity (kg)	Oven function	Time (min)	Shelf position
Sheep chops <sup>1)</sup>	1.2 - 2.5	Grilling	20 - 25	3
Ribs <sup>1)</sup>	2.0 - 2.5	Grilling	45 - 60	3
Burgers <sup>1)</sup>	3.0 - 3.5	Grilling	15 - 20	3
Mackerel <sup>1)</sup>	2.5 - 3.0	Grilling	20 - 25	3
Toast browning <sup>1)</sup>	1.0 - 1.2	Grilling	3 - 5	3
Toast Hawai <sup>1)</sup>	1.0 - 2.0	Grilling	15 - 20	3

<sup>1)</sup> Preheat the oven for 10 minutes.

## Revolving frying

Food	Quantity (kg)	Oven function	Time (min)	Shelf position
Sheep on skewer	3.0 - 4.0	Grilling with Turnspit	100 - 120	Turnspit
Chicken on skewer	3.0 - 3.5	Grilling with Turnspit	90 - 100	Turnspit

# 12. OVEN - CARE AND CLEANING

### WARNING!

Refer to Safety chapters.

## 12.1 Notes on cleaning

- Clean the front of the appliance with a soft cloth with warm water and a cleaning agent.
- To clean metal surfaces, use a dedicated cleaning agent.
- Clean the appliance interior after each use. Fat accumulation or other food remains may result in a fire.
- Clean stubborn dirt with a special oven cleaner.
- Clean all accessories after each use and let them dry. Use a soft cloth with warm water and a cleaning agent.
- If you have nonstick accessories, do not clean them using aggressive agents, sharp-edged objects or a dishwasher. It can cause damage to the nonstick coating.

## 12.2 Stainless steel or aluminium appliances




Clean the oven door with a damp cloth or sponge only. Dry it with a soft cloth. Do not use steel wool, acids or abrasive materials as they can damage the oven surface. Clean the oven control panel with the same precautions.


## 12.3 Removing the shelf supports

To clean the oven, remove the shelf supports.

1. Pull the front of the shelf support away from the side wall.

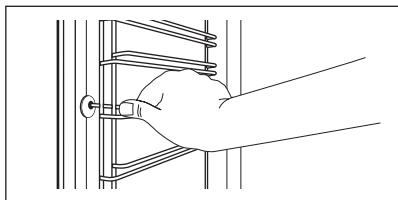

2. Pull the rear end of the shelf support away from the side wall and remove it.

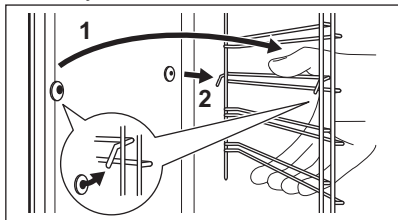

Install the shelf supports in the opposite sequence.

## 12.4 Catalytic cleaning

### ⚠ CAUTION!

Do not clean the catalytic surface with oven sprays, abrasive cleaning agents, soap or other cleaning agents. This will damage the catalytic surface.



Spots or discolouration of the catalytic surface have no effect on catalytic properties.

### ⚠ WARNING!


Keep children away when you clean the oven at a high temperature. The oven surface becomes very hot and there is a risk of burns.



Before activating the catalytic cleaning remove all the accessories from the oven.

The walls with a catalytic coating are self-cleaning. They absorb fat which collects on the walls while the appliance operates.

To support the self-cleaning procedure, heat the empty oven on a regular basis.

1. Clean the oven floor with warm water and washing up liquid, then dry it.
2. Set the function .
3. Set the maximum temperature and let oven operate for 1 hour.
4. When the appliance is cool, clean it with a soft and moist sponge.

## 12.5 Cleaning the oven door

The oven door has two panels of glass installed one behind the other. To make the cleaning easier remove the oven door.


### ⚠ WARNING!

The oven door can close if you try to remove the internal panel of glass when the door is still assembled.




Do not loosen the screws.


1. Open the door fully.

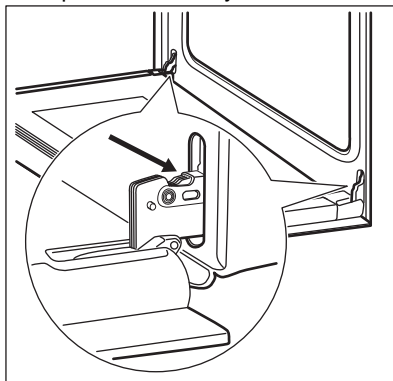


2. Lift and turn the levers on the two hinges till they stop (until you reach the pins).

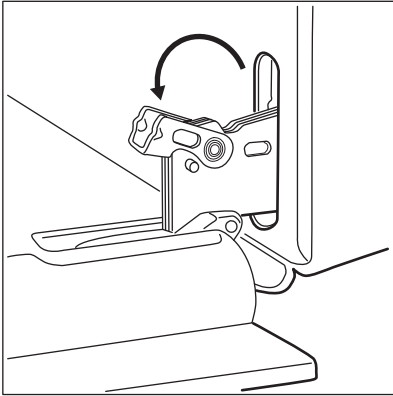


Avoid placing the levers in the vertical position and make sure both of them are pulled maximally towards you.

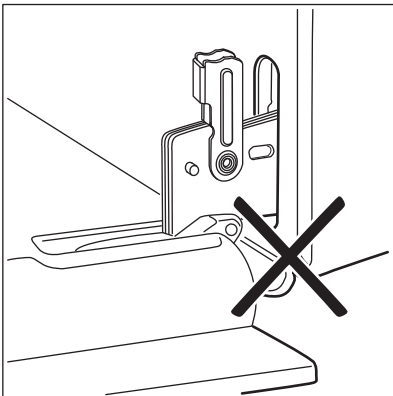


3. Close the oven door to the first opening position (halfway). Then pull forward and remove the door from its seat.

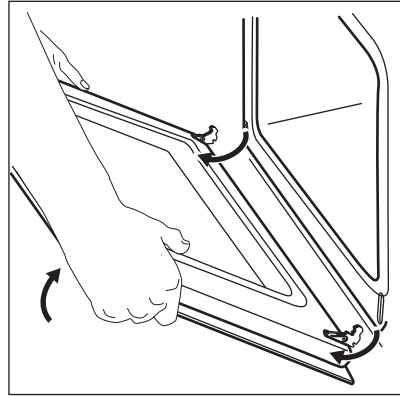

4. Put the door on a soft cloth on a stable surface.
5. Use a screwdriver to remove the 3 screws from the bottom edge of the door.

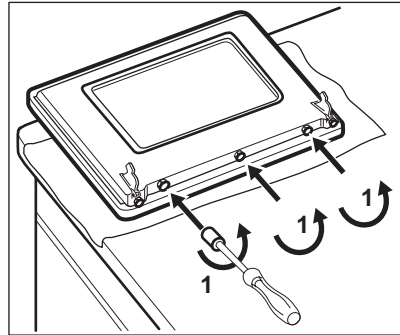


6. Use a spatula made of wood or plastic (or equivalent) to open the inner door. Hold the outer door, and push the inner door against the top edge of the door. Lift the inner door.

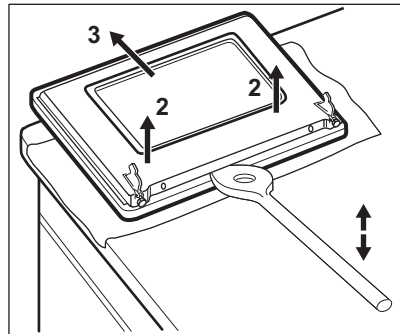


7. Clean the oven door with water and soap. Clean the inner side of the door. Dry the oven door carefully.


When the cleaning is completed, install the glass panels and the oven door. To install the oven door, do the above steps in the opposite sequence.

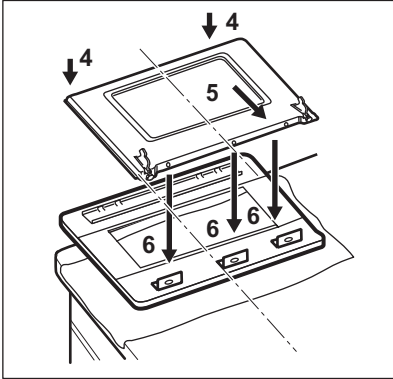

Make sure the slot in the hinge A rests on the edge of the hinge support B before releasing the oven door.

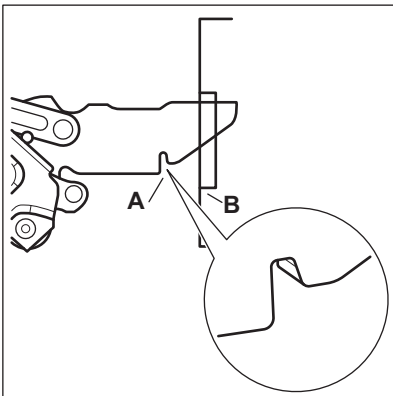

Make sure the levers are in their original position before closing the door.

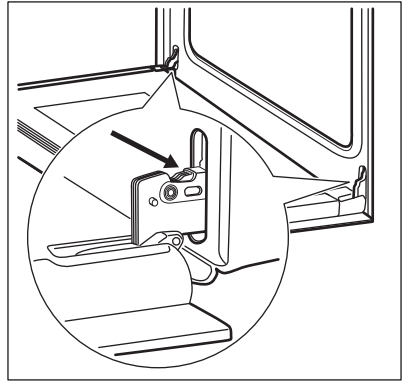

## 12.6 Replacing the lamp

Put a cloth on the bottom of the interior of the appliance. It prevents damage to the lamp glass cover and the cavity.

### **⚠ WARNING!**

Danger of electrocution! Disconnect the fuse before you replace the lamp. The lamp and the lamp glass cover can be hot.

1. Deactivate the appliance.
2. Remove the fuses from the fuse box or deactivate the circuit breaker.

### The back lamp

1. Turn the lamp glass cover counterclockwise to remove it.
2. Clean the glass cover.
3. Replace the lamp with a suitable 300 °C heat-resistant lamp.
4. Install the glass cover.

## 13. TROUBLESHOOTING



### **WARNING!**

Refer to Safety chapters.

## 13.1 What to do if...

Problem	Possible cause	Remedy
You cannot activate the appliance.	The appliance is not connected to an electrical supply or it is connected incorrectly.	Check if the appliance is correctly connected to the electrical supply.
You cannot activate or operate the hob. The oven does not heat up.	The fuse is blown.	Make sure that the fuse is the cause of the malfunction. If the fuse is blown again and again, contact a qualified electrician.
The oven / hob display shows an error code that is not in this table.	There is an electrical fault.	Deactivate the appliance with the house fuse or the safety switch in the fuse box and activate it again. If the display shows the error code again, contact the Customer Care Department.
There is no spark when you try to activate the spark generator.	The hob is not connected to an electrical supply or it is connected incorrectly.	Check if the hob is correctly connected to the electrical supply. Refer to the connection diagram.
There is no spark when you try to activate the spark generator.	The fuse is blown.	Make sure that the fuse is the cause of the malfunction. If the fuse is blown again and again, contact a qualified electrician.
There is no spark when you try to activate the spark generator.	Burner cap and crown are placed incorrectly.	Place the burner cap and crown correctly.
The flame extinguishes immediately after ignition.	Thermocouple is not heated up sufficiently.	After lighting the flame, keep the spark generator activated for equal or less than 10 seconds
The flame ring is uneven.	Burner crown is blocked with food residues.	Make sure that the injector is not blocked and the burner crown is clean.
The burners do not work.	There is no gas supply.	Check the gas connection.
The flame colour is orange or yellow.		The flame can look orange or yellow in some areas of the burner. This is normal.
The oven does not heat up.	The oven is deactivated.	Activate the oven.
The lamp does not operate.	The lamp is defective.	Replace the lamp.
Steam and condensation settle on the food and in the cavity of the oven.	You left the dish in the oven for too long.	Do not leave the dishes in the oven for longer than 15 - 20 minutes after the cooking process ends.
The oven does not heat up.	The clock is not set.	Set the clock.
The oven does not heat up.	The necessary settings are not set.	Make sure that the settings are correct.
The turnspit does not rotate.	The turnspit is not correctly installed into the turnspit hole.	Refer to "Using the turnspit".

Problem	Possible cause	Remedy
It takes too long to cook the dishes or they cook too quickly.	The temperature is too low or too high.	Adjust the temperature if necessary. Follow the advice in the user manual.
The display shows an error code that is not in this table.	There is an electrical fault.	Deactivate the oven with the house fuse or the safety switch in the fuse box and activate it again. If the display shows the error code again, contact the Customer Care Department.
The display shows "12.00".	There was a power cut.	Reset the clock.

### 13.2 Service data

If you cannot find a solution to the problem yourself, contact your dealer or an Authorised Service Centre.

The necessary data for the service centre is on the rating plate. The rating plate is on the

front frame of the appliance cavity. Do not remove the rating plate from the appliance cavity.

#### We recommend that you write the data here:

Model (MOD.) .....

Product number (PNC) .....

Serial number (S.N.) .....

## 14. INSTALLATION

### WARNING!

Refer to Safety chapters.


### 14.1 Location of the appliance

You can install your freestanding appliance with cabinets on one or two sides and in the corner.

### i

Keep a distance of about 1 cm between the appliance and the back wall to make sure that the lid opens.

For minimal distances for fitting check the table.

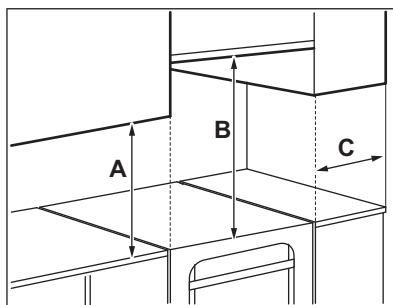

Minimum distances

Dimension	mm
A	400
B	650
C	150

## 14.2 Technical data

Voltage	220 - 240 V
Frequency	50 - 60 Hz
Appliance class	1

Dimension	mm
Height	850 - 870
Width	900
Depth	600

## 14.3 Other technical data

Appliance category:	I12H3B/P
LPG:	G30 (3B/P) 28-30 mbar
Natural Gas:	G20 (2H) 20 mbar

## 14.4 Bypass diameters

BURNER	Ø BYPASS 1/100 mm
Auxiliary	29
Semi-rapid	32
Rapid	55
Triple Crown	67

## 14.5 Gas burners for NATURAL GAS G20 20 mbar

BURNER	NORMAL POWER kW	REDUCED POWER kW	INJECTOR MARK 1/100 mm
Triple Crown	3.8	1.8	146
Rapid	2.9	1.1	119
Semi-rapid	1.85	0.45	96
Auxiliary	0.95	0.35	70

## 14.6 Gas burners for LPG G30 28-30 mbar


BURNER	NORMAL POWER kW	GAS RATE g/h	REDUCED POWER kW	INJECTOR MARK 1/100 mm
Triple Crown	4.0	290.9	1.8	101o
Rapid	3.0	218.1	1.1	88
Semi-rapid	1.9	138.2	0.43	71
Auxiliary	0.95	69.1	0.35	50

## 14.7 Gas connection

### **⚠ WARNING!**

Before you connect the gas, disconnect the appliance from the electricity supply or switch off the fuse in the fuse box. Close the primary valve of the gas supply.

Use a fixed connections or use a flexible stainless steel pipes in compliance with the regulation in force. If you use flexible metallic pipes, make sure they do not come in touch with mobile parts and they are not squeezed.

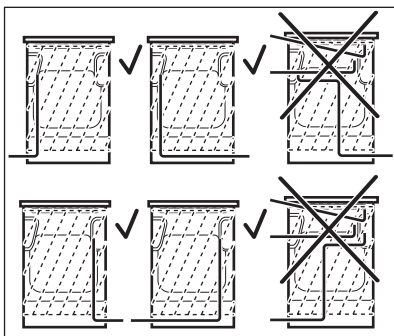

### **⚠ WARNING!**

When installation is complete, make sure that the seal of each pipe fitting does not leak. To check the seal use a soap solution, not a flame.

## 14.8 Flexible nonmetal pipes connection

If you have an easy access to the connection, you can use a flexible pipe. The flexible pipe must be tightly attached by clamps.

In installation always use the pipe holder and the gasket. The flexible pipe can be applied when:

- it can not get hotter than room temperature, higher than 30 °C,
- it is not longer than 1500 mm,
- it has no narrowing anywhere,
- it is not twisted or tighten,
- it does not get in touch with sharp edges or corners,
- it's conditions can be easily checked.

When checking the flexible pipe make sure:

- it does not show cracks, cuts, marks of burnings on the two ends and on its full length,
- the material is not hardened, but shows its correct elasticity,
- the fastening clamps are not rusted,
- expired term is not due.

If one or more defects are visible, do not repair the pipe, but replace it.

### **⚠ WARNING!**

When installation is complete, make sure that the seal of each pipe fitting does not leak. To check the seal use a soap solution, not a flame.

The gas supply ramp is on the rear side of the control panel.

### **⚠ WARNING!**

Before you connect the gas, disconnect the appliance from the electricity supply or switch off the fuse in the fuse box. Close the primary valve of the gas supply.

## 14.9 Adjustment to different types of gas

### **⚠ WARNING!**

Let only an authorized person do the adjustment to different types of gas.




If the appliance is set for liquid gas you can change it to natural gas, with the correct injectors. The gas rate is adjusted to suit.

### **⚠ WARNING!**

Before you replace the injectors, make sure that the gas knobs are in the Off position. Disconnect the appliance from the electrical supply. Let the appliance cool down. There is a risk of injury.



The appliance is set to default gas. To change the setting choose a pipe holder from the list. Always use the gasket sealing.

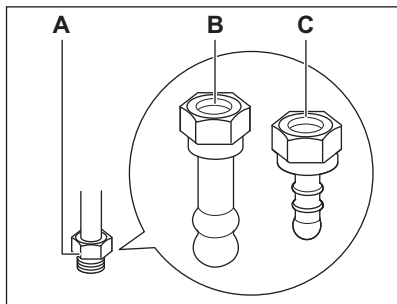


- A. Gas connection end
- B. Natural Gas pipe holder
- C. LPG pipe holder

### 14.10 Hob injectors replacement

Replace the injectors when you change the gas type.

1. Remove the pan supports.
2. Remove the caps and crowns of the burner.
3. Remove the injectors with a socket spanner 7.
4. Replace injectors with the ones necessary for the type of gas you use.

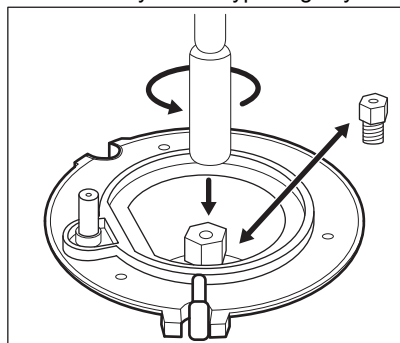

5. Replace the rating plate (it is near the gas supply pipe) with the one for the new type of gas supply.




You can find this plate in the bag supplied with the appliance.

If the supply gas pressure is not constant or it is different from the necessary pressure, install an applicable pressure adjuster on the gas supply pipe.

### 14.11 Adjusting the minimum gas level on the hob burner

1. Disconnect the appliance from the electricity.
2. Remove the knob for the hob. If there is no access to the bypass screw dismount the control panel before adjustment start.
3. With a thin and flat screwdriver adjust the bypass screw A.

The model determines the position of the bypass screw A.

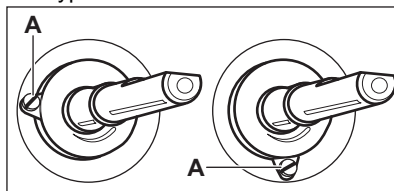

Changing from natural gas to liquid gas

1. Fully tighten the bypass screw.
2. Put the knob back.

Changing from liquid gas to natural gas

1. Unscrew approximately one turn the bypass screw position A.
2. Put the knob for the hob back.
3. Connect the appliance to the electricity.

#### **WARNING!**

Put the mains plug into the mains socket only if all parts are back into their initial position. There is a risk of injury.

4. Light the burner.  
Refer to "Hob - Daily use" chapter.
5. Turn the knob for the hob to the minimum position.

6. Remove the knob for the hob again.
7. Screw on slowly the bypass screw till the flame becomes minimum and stable.
8. Put the knob for the hob back on.

## 14.12 Levelling


### CAUTION!

Remove all the accessories from the oven.


### CAUTION!

The assembly should be made by two people.


1. Open the lid of the appliance and disassemble it.
2. Disassemble the pan supports and all the burner assemblies.

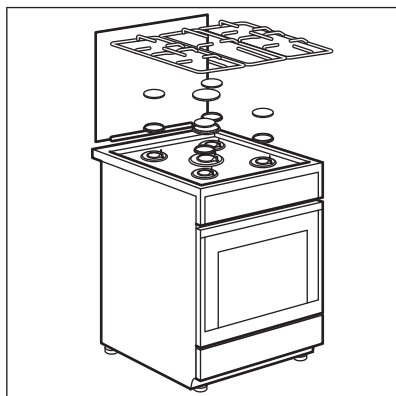


3. Tilt the cooker backwards 30 degrees.

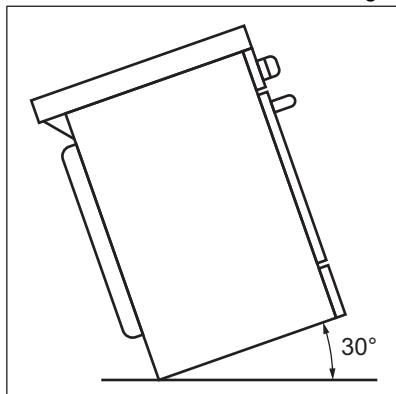


4. With the help of a second person who supports the cooker from falling, fold the front feet into the holes in the plinth.

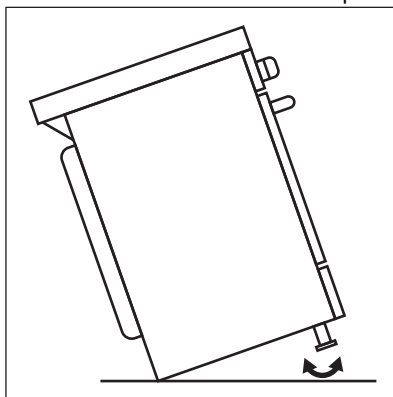

5. Tilt the cooker forward 30 degrees and repeat the previous step for the back feet.

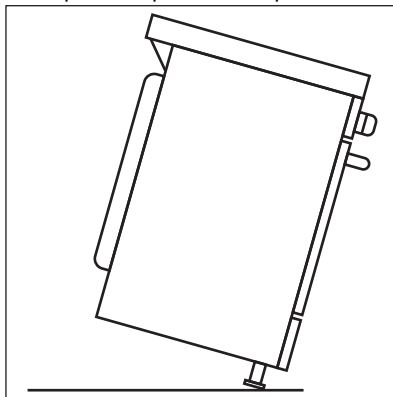

6. Carefully lay the cooker on the floor. If the floor is not equally flat, use the adjustable feet on the bottom of the appliance to set a stable position for the appliance.

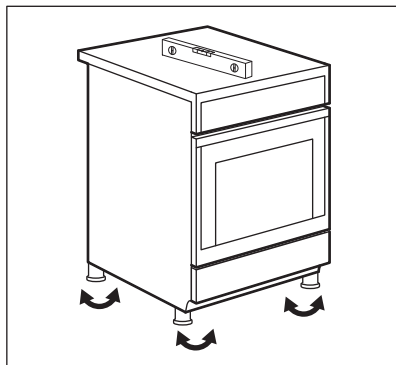

To install all the accessories, do the first step in the opposite sequence.

### 14.13 Anti-tilt protection

Set the correct height and area for the appliance before you attach the anti-tilt protection.

#### **⚠ CAUTION!**


Make sure you install the anti-tilt protection at the correct height.




Make sure that the surface behind the appliance is smooth.

You must install the anti-tilt protection. If you do not install it, the appliance can tilt.

Your appliance has the symbol shown on the picture (if applicable) to remind you about the installation of the anti-tilt protection.

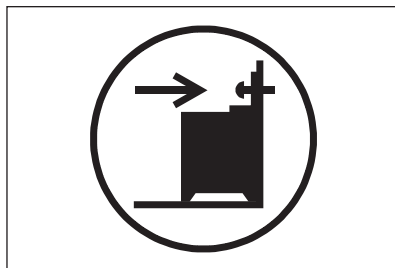

1. Install the anti-tilt protection 275 - 280 mm down from the top surface of the appliance and 126 - 130 mm from the side of the appliance into the circular hole on a bracket. Screw it into the solid material or use applicable reinforcement (wall).

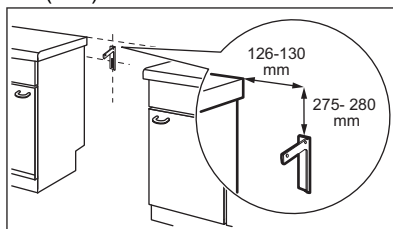

2. You can find the hole on the left side at the back of the appliance. Lift the front of the appliance and put it in the middle of the space between the cupboards. If the space between the bench cupboards is larger than the width of the appliance, you must adjust the side measurement to centre the appliance.



If you changed the dimensions of the cooker, you must align the non-tip device correctly.

#### **⚠ CAUTION!**

If the space between the bench cupboards is larger than the width of the appliance, you must adjust the side measurement to the centre of the appliance.

## 14.14 Electrical installation


**⚠ WARNING!**

The manufacturer is not responsible if you do not follow the safety precautions from Safety chapters.


This appliance is supplied with a main plug and a main cable.


**⚠ WARNING!**

The power cable must not touch the part of the appliance shaded in the illustration.

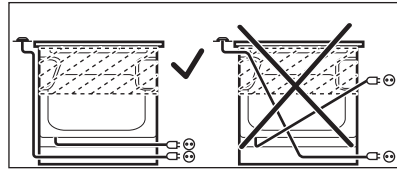

## 15. ENVIRONMENTAL CONCERNS

Recycle materials with the symbol . Put the packaging in relevant containers to recycle it. Help protect the environment and human health by recycling waste of electrical and electronic appliances. Do not dispose of

appliances marked with the symbol  with the household waste. Return the product to your local recycling facility or contact your municipal office.



**electrolux.com**

867342397-E-342024

