

Hi-Concerto Upgrade Manual

for AX5125H

1. Download the update file to your computer.
2. Use a computer to transfer the updated software file **spupdate.bin** to the USB storage device. (Save the file without changing the file name and place it directly in the root directory of the USB storage device.)
3. Connect the **USB** device to the **USB** port of your soundbar (usually located at the back).
4. Turn on your soundbar and the switch to the **AUX** source using the **SOURCE** button.
5. While on the **AUX** source, press the following buttons on the remote control in sequence: **PREVIOUS – PREVIOUS – NEXT – NEXT – PLAY/PAUSE**. (Refer to the red box in the picture.)
6. The update process will begin, and your soundbar's display will show “**UD XX%**” during the update.
7. Once the update is complete, your soundbar will **automatically restart** and reset to factory settings.



Important Note:

Do not perform any operations until the update is complete.

What you need:

USB storage device: Prepare a USB storage device formatted with FAT32. Do not use a USB storage device formatted in any other format than FAT32.

