
Electrolux


Instruction Book


500 **CORDLESS CLEANER**

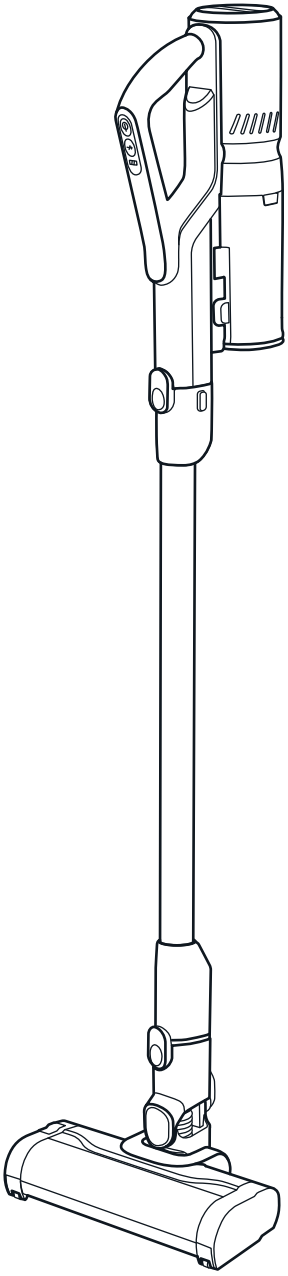


*Actual product may differ from illustration.

A31540105

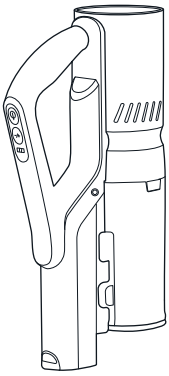




Model: C231
Nominal Voltage / Capacity / Energy:
18.5V / 1850mAh /34.23Wh

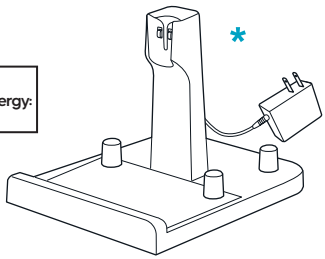





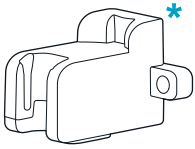





KSD-11W-225050VED

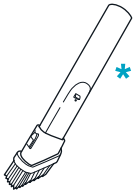

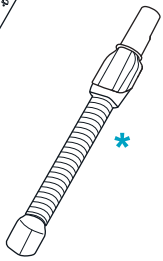




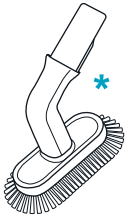

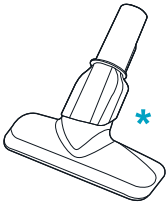





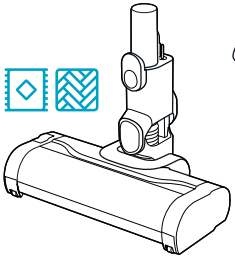

*

Accessories may vary from model to model. | Les accessoires peuvent varier d'un modèle à l'autre. | Ausstattung und Zubehör kann je nach Modell variieren. | Accessoires kunnen per model verschillen. | Tillbehören kan variera mellan olika modeller. | Lisävarusteet voivat vaihdella malleittain. | Tilbehør kan variere fra model til model. | Tilbehør kan variere fra modell til modell. | Los accesorios pueden variar según el modelo. | Os acessórios podem variar de modelo para modelo. | Gli accessori possono variare da modello a modello. | Τα εξαρτήματα ίσως διαφέρουν από μοντέλο σε μοντέλο. | Lisad võivad mudelist mudelisse varieeruda. | Priedai kitiems modeliams gali skirtis. | Akcesoria mogą się różnić w zależności od modelu. | Piederumi katram modelim var atšķirties. | Příslušenství se může u jednotlivých modelů lišit. | Doplnky sa môžu líšiť v závislosti od modelu. | Dodaci se mogurazlikovati kod određenih modela. | Nastavki se lahko glede na model razlikujejo. | Принадлежности могут отличаться от модели к модели. | Ці компоненти можуть відрізнятися залежно від моделі. | tartozékok típusonként eltérőek lehetnek. | Accesoriile pot diferi de la model la model. | Принадлежностите може да се различават според различните модели. | Aksesuarlar, modelden modele farklılık gösterebili. | اﻟﻤﺮﻓﻘﺎت ﻗﺪ ﺗﺨﺘﻠﻒ ﻣﻦ ﻣﻮدﻳﻞ ﻷﺧﺮ. | Додаци могу да се разликују у зависности од модела усисивача. | อุปกรณ์เสริมอาจแตกต่างกัน ในแต่ละรุ่น 仅特定机型提供 | 악세사리는 모델마다 다를 수 있습니다. | Els accessoris poden canviar segons el model. | ვრცელდება მხოლოდ გარკვეულ მოდელებზე.


Carpet Hard Floor


www.electrolux.com


For indoor use only.


Note: This instruction book should be read together with safety precaution booklet.




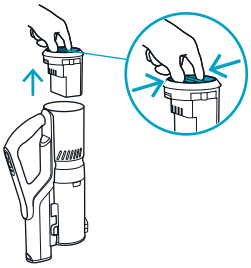


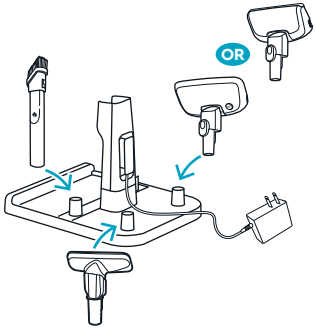

OR

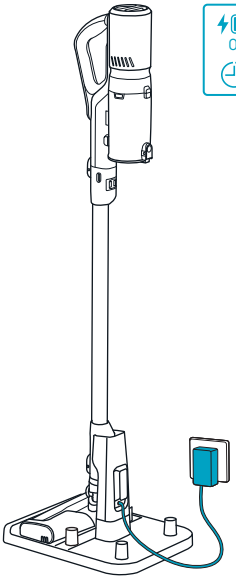

0→100%
≈4h

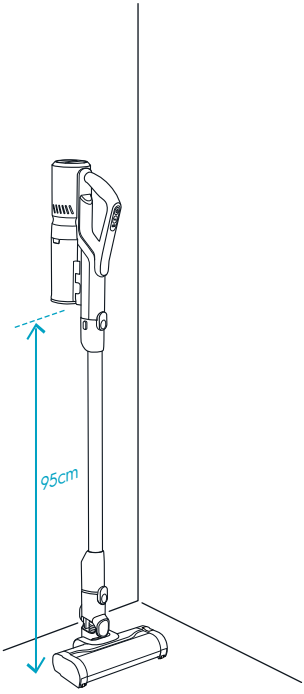

95cm

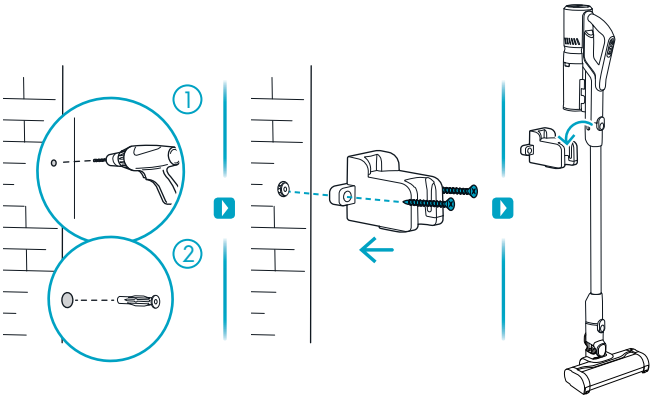

1
2

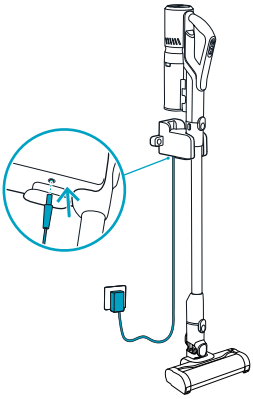


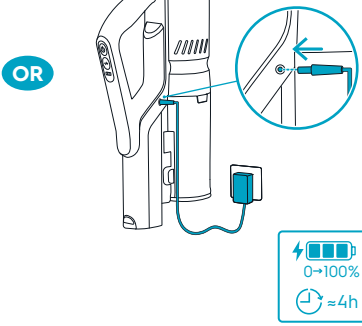

OR
0→100%
≈4h

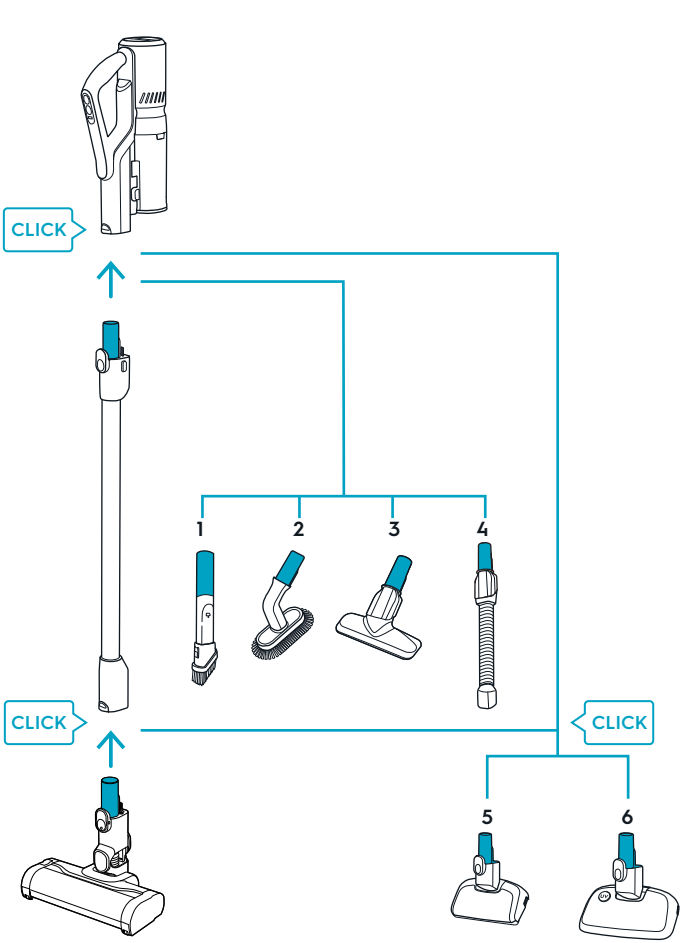

CLICK
CLICK
CLICK
1
2
3
4
5
6

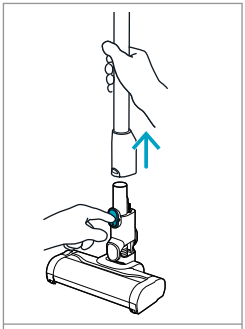


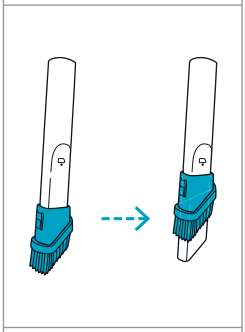


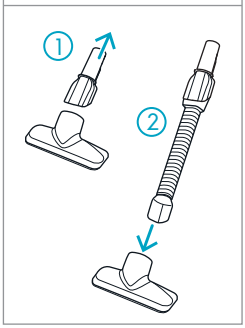

①
②

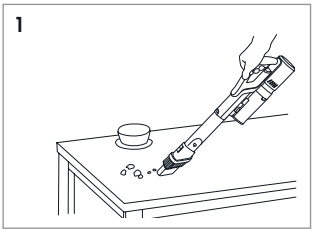

1

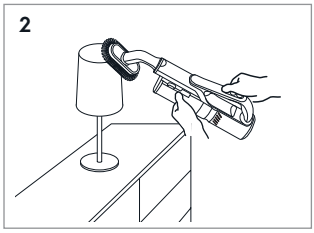

2

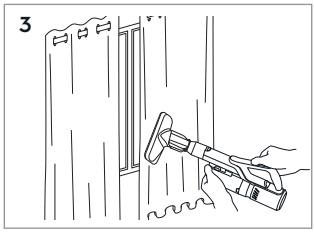

3

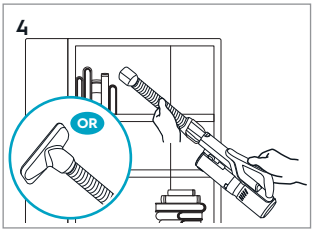

4
OR

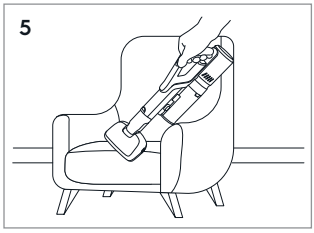

5

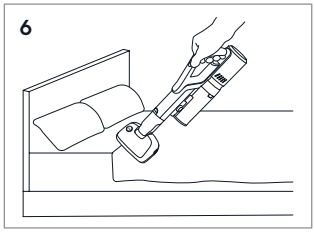

6

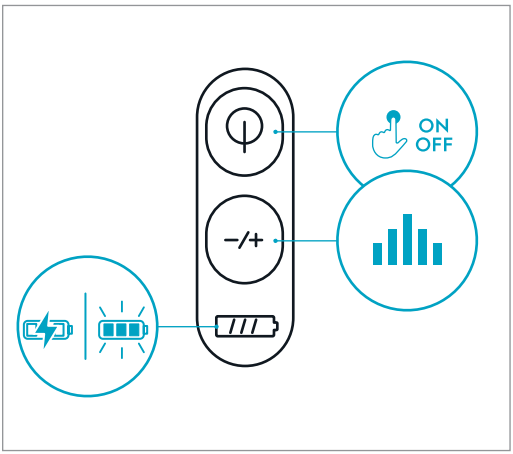

ON
OFF
−/+

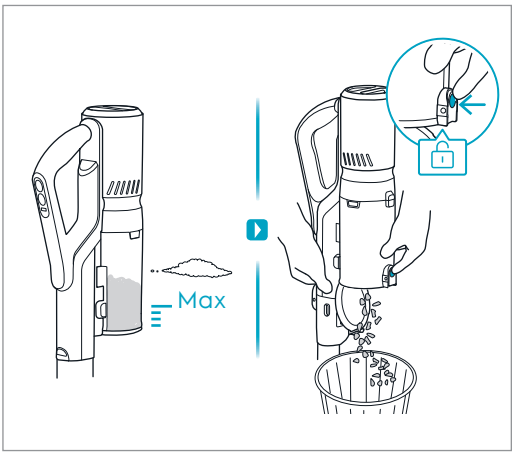

Max

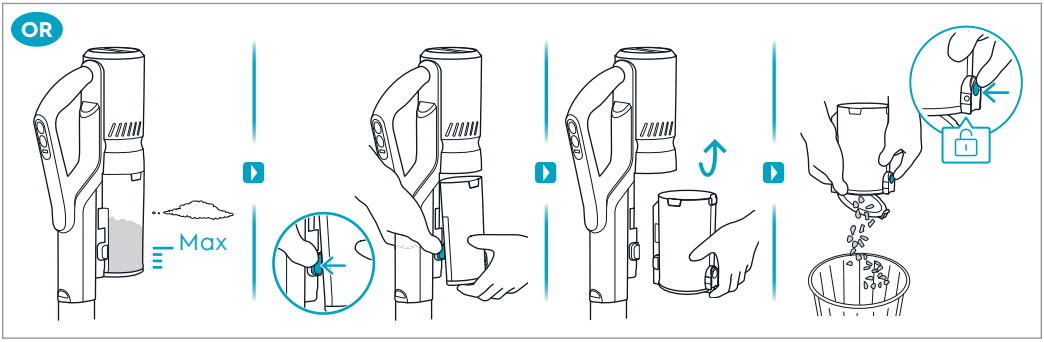

OR
Max

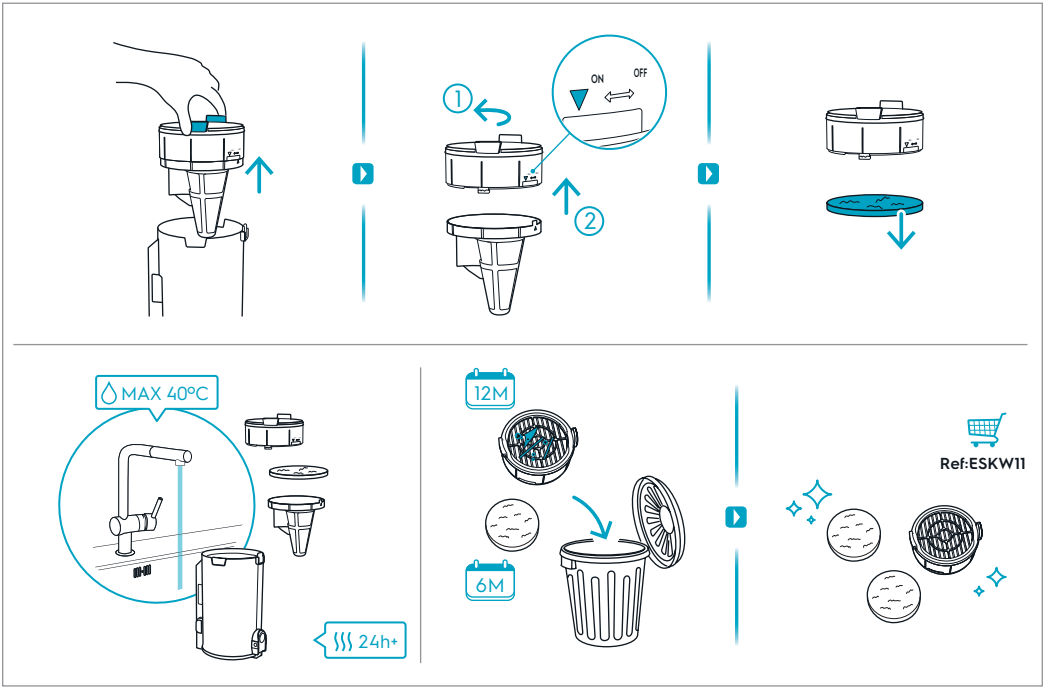

ON
OFF
1
2
MAX 40°C
24h+
12M
6M
Ref:ESKW11

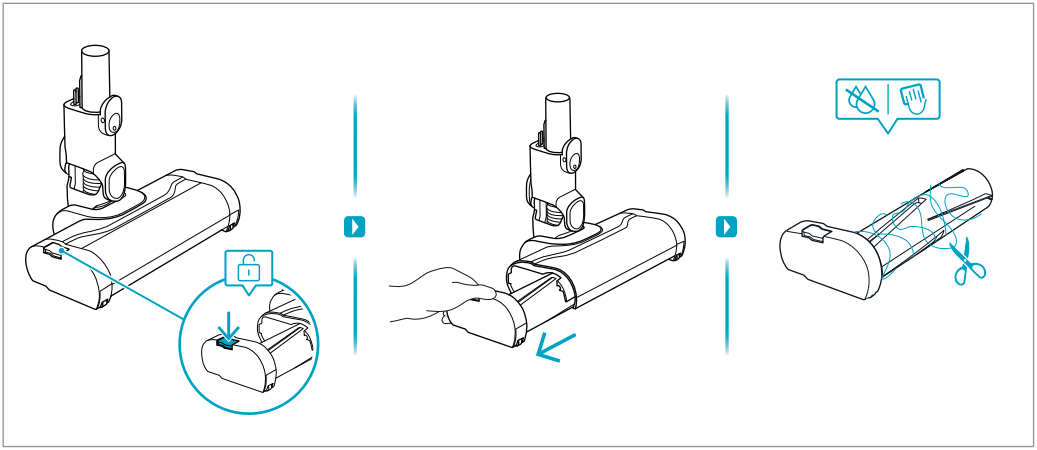


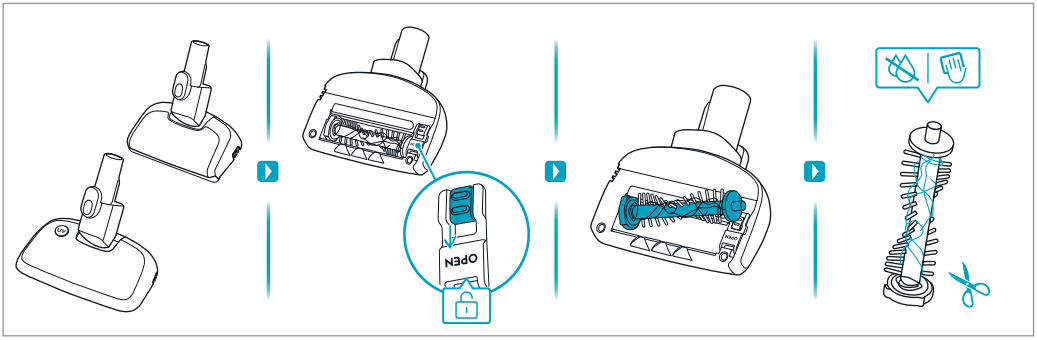

OPEN

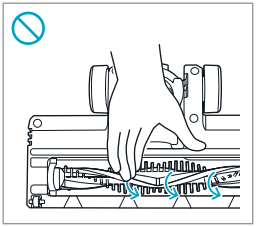


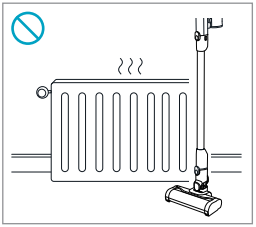


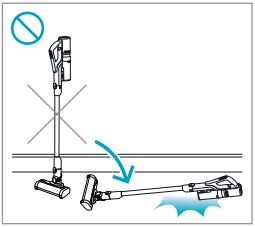


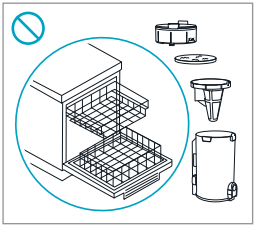


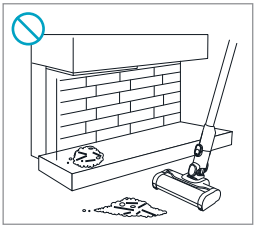


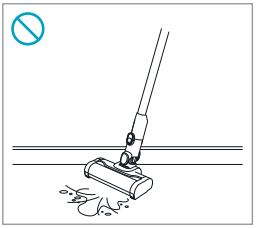


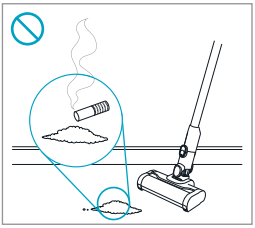

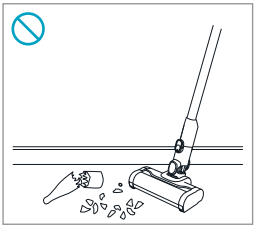


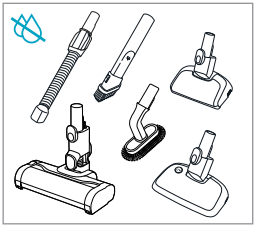

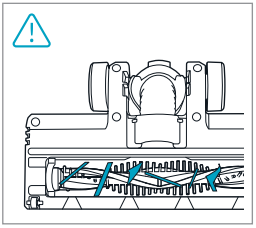

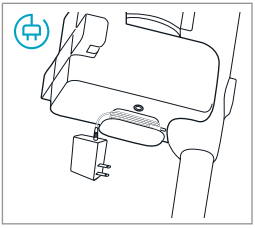

www.shop.electrolux.com



ESKW11

900 923 896
Performance kit

*Accessories may vary by market

Troubleshooting

Before entrusting the maintenance department, please check the following points:

Common issues	Possible Cause	Solution
The appliance does not work	The appliance is out of battery or has a low battery level.	Fully charge the battery before use.
	The appliance is overheating due to a blockage, and the high-temperature cut-off has been activated.	Clear the blockage and wait until the temperature returns to normal.
	The connecting tube and floor brush opening are clogged with debris.	Remove any debris causing the blockage.
Low suction power	The dust bin may be full, or the filters may be clogged or dirty.	Empty dust bin and clean filters according to instruction manual.
	Foreign objects or blockages may be affecting the tube and suction inlet.	Clean the tube and the suction inlet.
Unusual noise detected from the appliance	The suction inlet is blocked.	Clear any blockage in the suction inlet.
Brush roll doesn't rotate	The brush roller may be jammed by hair and/or large debris.	Remove brush roller and clean brush rollers according to instruction manual.
	When used on thick carpets or other high-resistance surfaces, the brush may stop automatically to prevent motor damage.	Restart the vacuum cleaner on a suitable surface.
Short operating time after charging	Insufficient charging time.	Fully charge its battery before use.
	Battery aging.	Replace or purchase a new battery.
The unit automatically shuts down	Large debris entangled on the nozzle. Causing the nozzle to stop due to protection mechanism.	Remove the clogged debris and restart the vacuum cleaner.
	Motor overheats after long-term use in a high-temperature environment and activates the protection mechanism.	Turn off the vacuum cleaner and allow it to cool down before using it again.
	Battery protection activates when the temperature is above 60°C or below 5°C.	Ensure the product is at room temperature before resuming operation.

ENVIRONMENTAL CONCERNS

Recycle materials with the symbol ♺. Put the packaging in relevant containers to recycle it. Help protect the environment and human health by recycling waste of electrical and electronic appliances.

Do not dispose appliances marked with the symbol  with the household waste. Return the product to your local recycling facility or contact your municipal office.

ⓘ For Switzerland:

Where should you take your old equipment?

Anywhere that sells new equipment or hand it in to official SENS collection points or official SENS recycling firms.

The list of official SENS collection points can be found at www.erecycling.ch



